



STARTING & DRIVING



WE'LL GUIDE YOU THROUGH
EVERY STEP OF THE JOURNEY.

G6

LOCKING & UNLOCKING YOUR G6


Key Fob

Press the unlock or lock button on your key fob to secure or access the vehicle.



Manual Override


In case of a flat battery in the key fob or any other issue, use the manual override key.

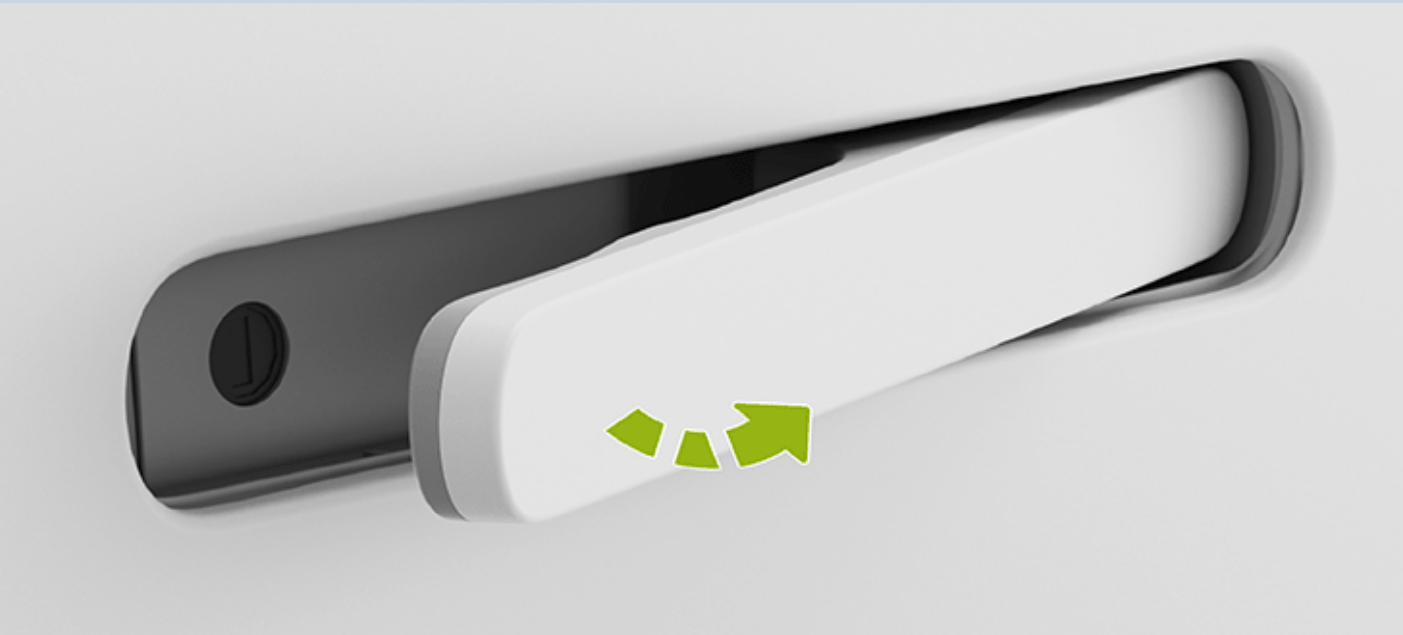

XPENG App

If your XPENG G6 is connected to the XPENG App you can unlock the vehicle remotely. This is useful if you don't have the key fob with you or you are not near the vehicle.

Available to download the XPENG app serves as your smart companion for driving and managing your XPENG vehicle. It allows you to remotely monitor and control your car, check battery status and charging progress.

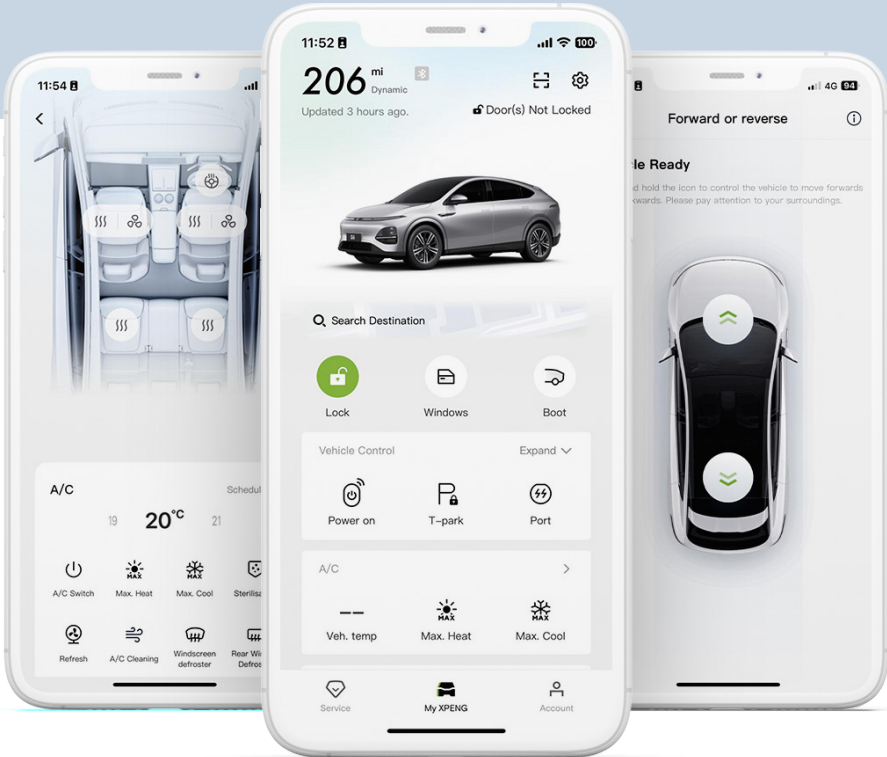

Keyless Entry

Use the XPENG App to set the vehicle to automatically lock/unlock the doors.




Please note: your dealer will bind your vehicle to the XPENG App using the email address you provided to them. To ensure a smooth setup, make sure you register for the app with the same email address you gave your dealer.



STARTING & DRIVING YOUR G6


Starting Your G6

Upon unlocking your vehicle, it is ready and powered on.

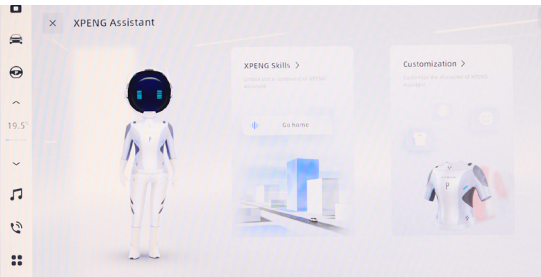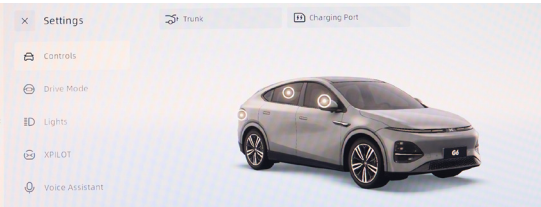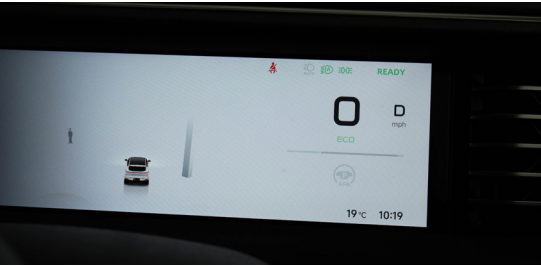

- When the car is powered on, you should see the dashboard light up.
- **Seat Adjustment**
You can adjust your seat manually using the controls on the side of the seat. Alternatively, preset your preferred seating position via the Robot Icon in the top-right corner of the central touchscreen.
- **Mirror Adjustment**
Swipe down on the central touchscreen to select the mirror adjustment option. You can then use the steering wheel controls to fine-tune the mirrors. This setting can also be saved as part of your user preferences.
- **Heating & Cooling**
Adjust the cabin temperature and activate seat heating or cooling features. These can be individually set for each seat, ensuring all passengers remain comfortable.
- **Voice Assistance**
Say "Hey XPENG" to control many functions by voice command. For example: "Hey XPENG, open driver's window."

Select Your Gear

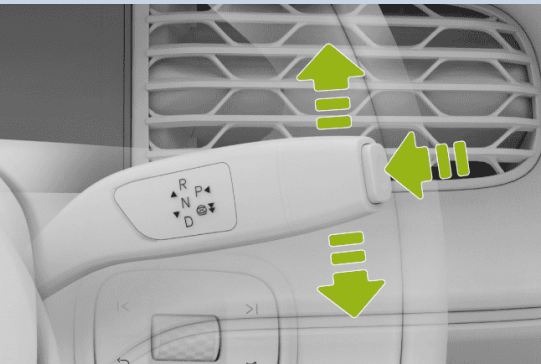

- With your foot on the brake, using the Shift lever to the right of the steering wheel you will be able to select your driving mode:
- D (Drive) :
 - R (Reverse)
 - P (Park)



Begin Driving

After selecting a gear, release the brake (in Drive mode) to move off. Use the accelerator and brake pedals for normal driving.



Stopping Your G6

Bring the vehicle to a complete stop, then shift to **Park (P)** using the gear lever. The parking brake will engage automatically.



Exiting the Vehicle

Press the Exit button on the door to open and leave the vehicle.

CHARGING

Your XPENG G6 can be charged in three ways: **Home Charging, Public Charging, and Rapid Charging.**



Home Charging (AC)

The most convenient option for daily use — simply charge overnight.

What you need:

- Wallbox or smart home charging point
- Standard Type 2 charging cable (supplied)

How to set up:

- Install a 7kW wallbox charger with a certified electrician



Public Charging (AC & DC)

Public charging points are widely available across the UK, giving you flexibility while on the go.

What you need:

- Type 2 charging cable (for most AC stations)
- RFID card or app from a provider (e.g., Shell Recharge, BP Pulse, Pod Point)

How to use:

- Locate a charger via apps like Zap-Map, PlugShare, or ChargePoint
- Register with the charging network
- Use the app or RFID card to activate, plug in, and start charging

Charging speed:

- Fast 7-22kW



Rapid Charging (DC Fast Charging)

Ideal for long trips or quick top-ups, with a growing UK network of rapid chargers.

How to use:


- Find a charger via apps like Zap-Map or ChargePoint
- Plug in and follow on-screen instructions
- Pay via app or contactless card (depending on provider)
-

Charging speed:

- Rapid 50-149kW
- Ultra Rapid 150kW

MAINTENANCE & CARE

Your XPENG G6 stays up to date with over-the-air (OTA) software updates, ensuring optimal performance and access to the latest features.

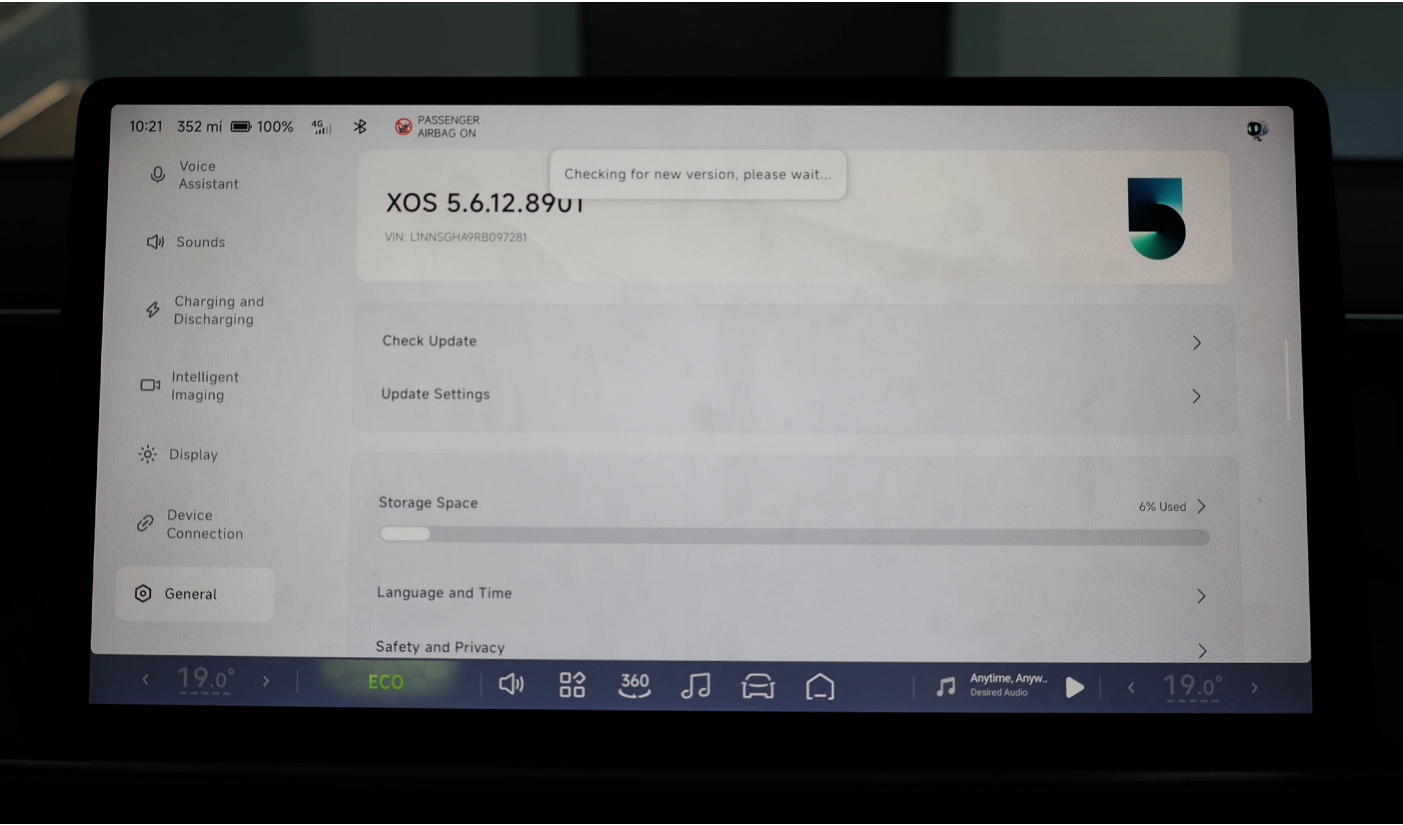

Software Updates

Regular updates are important for enhancing performance and adding new functions. The G6 can automatically download and install these updates for you.



Service Visits

Scheduled maintenance is required every 12 months or 12,500 miles (whichever comes first).

To locate a Service Retailer visit: <https://xpengcars.co.uk/xpeng-showrooms/>



Warranty

Vehicle Warranty: 5 years / 75,000 miles

Traction Battery & High Voltage Equipment: 8 years / 100,000 miles

Body (Sheet Metal): 12 years / unlimited mileage

NAVIGATION

The XPENG G6 comes equipped with an integrated satellite navigation system, accessible through the Apps menu on the central touchscreen. Alternatively, you can use your preferred navigation app through your phone, such as Apple Maps, Google Maps, Waze, for a familiar and personalised experience



Useful Contact Information

XPENG Assistance – Tel. 0208 603 9841 available 24 hours a day, 7 days a week.
Locate a Dealer – <https://xpengcars.co.uk/xpeng-showrooms/>
Customer Support – Tel. 01285 647701, Email. cs@xpengcars.co.uk available Monday-Friday, 9am-5.30pm.